



Cryptex
Instruction Manual

WARNING!

This cryptex contains small and potentially sharp parts. Always supervise children when they are using the cryptex. Do not allow children younger than three years old to handle the cryptex.

Opening the Cryptex

1. Set each ring to the lock code, using the arrows on either handle as an alignment guide. The default code is **I, II, III, IV, V**.
2. Pull the right-side handle out by sliding the inner sleeve (**A**) from the outer sleeve (**B**).

Note: If the cryptex doesn't slide open easily, check that the rings are flush with the handles. Some gentle jiggling may be required.

Changing the Lock Code

1. Unlock the cryptex and slide the inner sleeve (**A**) out from the outer sleeve (**B**).
2. Rotate the lock ring (**C**) at the end of the outer sleeve clockwise, then lift the ring away when the tabs inside the lock ring align with the slots at the top of the outer sleeve.
3. Remove each inner ring and facade ring assembly (**D**) from the outer sleeve. Every assembly has one facade ring (**D2**) and one inner ring (**D1**).
4. Remove the facade ring from the inner ring. Note the padlock icon on the inner ring.
5. Set the facade ring to your desired code symbol on the inner ring by aligning the symbol on the facade ring with the padlock icon on the inner ring.
6. Assemble the facade ring and inner ring back into an inner ring and facade ring assembly, then put each assembly back onto the outer ring according to your desired combination order.
7. Replace the lock ring by dropping the tabs of the inner ring into the slots at the top of the outer sleeve, aligning the slot in the lock ring with the slot in the outer ring, and then rotate

counter-clockwise to secure.

8. Slide the inner sleeve back into the outer sleeve with each ring in the unlocked position.
9. Memorize or write down your final combination order, then scramble the rings.

The cryptex is now locked and will unlock with your selected combination.

